

It's About Time Charm Bracelet Watch

Project B1010


Designer: Megan Milliken

An adorable assortment of charms in brass, copper, and silver tones hang from this bracelet with a petite copper plated pocket watch. It's a charming addition to your favorite outfit!




What You'll Need

Antiqued Brass Large Round Rolo Chain 7.3mm Bulk By The Foot

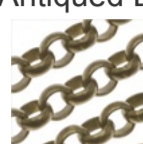


SKU: CHA-9958
Project uses 1 foot

Brass Oxide Finish Pewter Heirloom Toggle Clasp 14.7mm (1)

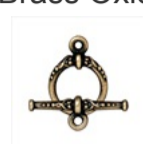


SKU: FCL-7800
Project uses 1 piece

Antiqued Brass Open Jump Rings 7mm 18 Gauge (50)

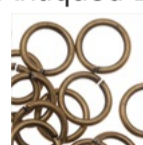

SKU: FJR-5179
Project uses 1 piece

Antiqued Brass Open Jump Rings 6mm 18 Gauge (x100)

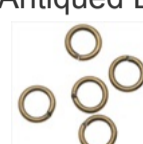


SKU: FJR-5301
Project uses 8 pieces

Antiqued Brass Tiny Flower Charms 12.5mm (2)




SKU: PND-0902
Project uses 1 piece

Fine Silver Plated Pewter Heart Lock Keyhole Charm 16.3mm (1)

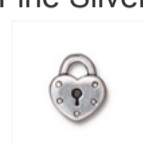

SKU: PND-5158
Project uses 1 piece

Antiqued Silver Plated Ribbon Bow Charms 17mm (2)

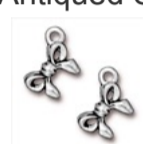

SKU: PND-5565
Project uses 1 piece

Copper Plated Lead-Free Pewter Fleur Pendants 24mm (2)



SKU: PND-5591
Project uses 1 piece

Copper Plated Lead-Free Pewter Fleur Key Pendant 34mm (1)



SKU: PND-5597
Project uses 1 piece

Antiqued Brass Round Sphere Locket Pendant 18mm (1)



SKU: PND-5667
Project uses 1 piece

Pocket Watch Pendant - Antiqued Copper Quartz Motion - Filigree Lid And Chain



SKU: PWC-26
Project uses 1 piece



Specialized Tools

Beadsmith Jeweller's Micro Pliers Chain Nose Flat Nose



SKU: XTL-5511

Beadalon Memory Wire Shears Cutting Pliers -Strong & Easy



SKU: XTL-5612

Instructions:

The chain used in this project is quite bulky. Make sure you use wire shears or strong wire cutters to cut the chain. Attempting to cut the chain with jewelry flush cutters may damage your flush cutters.

1. Begin by using a pair of wire shears to cut a 7" length of antique brass large round rolo chain.
2. Next, use a pair of chain nose pliers to open the jump ring that attaches the antique copper plated pocket watch pendant to the chain it comes with. We won't be using this chain or the jump ring for this project.
3. Find the middle link on your length of rolo chain. Use a 7 mm, 18 gauge antique brass plated jump ring to hang the pocket watch pendant from the middle link on the rolo chain.
4. Skip four links in the rolo chain to the right and use a 6 mm, 18 gauge antique brass plated jump ring to hang an antique brass flower charm. Skipping four links between each charm, use 6 mm jump rings to hang the rest of the charms according to the order shown in the photos, or however you'd like.
5. Use a 6 mm jump ring to attach one side of a brass oxide pewter heirloom toggle clasp to one end of the rolo chain. Then use another 6 mm jump ring to attach the other side of the clasp to the other end of the rolo chain.

Don't forget to put a photo or two in your antique brass sphere locket pendant to add a personal touch to your bracelet!

Variations

There are so many different chains and charms to choose from to use for your charm bracelet! Choose charms that speak to you to personalize your bracelet!

When substituting in items, pay attention to sizes and styles to make sure all your pieces will fit together.

