

Winter's Dawn Bracelet

Project B7047

Rachel Zaimont

Make this shimmering, heirloom quality piece by combining Swarovski crystal BeCharmed beads featuring delicate snowflake patterns and winter morning hues. Strung on a sterling silver European Style bracelet with dangling crystal bead charms, this piece will sparkle brilliantly all season long!

What You'll Need

Sterling Silver Charm Bracelet For European Style Large Hole Beads 3mm / 7.5 Inch With Smart Bead Stoppers

SKU: AXC-9473

Project uses 1 piece



Swarovski Crystal, 81504 BeCharmed Pave Medley Bead 4.5mm Hole 14mm, 1 Pc, Ethereal Blue Mix

SKU: SWCR-9509

Project uses 1 piece



Swarovski Crystal, 82063 BeCharmed Pave Snowflake Bead 4.5mm Hole 14mm, 1 Piece, Light Sapphire

SKU: SWCR-9539

Project uses 2 pieces



Swarovski Crystal, 81101 BeCharmed Pave Slim European Style Lg Hole Bead 13.5mm, 1 Piece, Golden Shadow

SKU: SWBB-5289

Project uses 4 pieces



Swarovski Crystal, 81001 BeCharmed Pave Stopper Bead For Euro Style Bracelets 13mm, 1 Piece, Gold Shadow

SKU: SWBB-5278

Project uses 2 pieces



Sterling Silver Wide Bail To Attach Charm Bead - European Style Large Hole (1)

SKU: BMB-2636

Project uses 4 pieces



Swarovski Crystal, 5000 Round Beads 6mm, 10 Pieces, Denim Blue

SKU: SWC-06501

Project uses 4 pieces



Head Pins, 3/4 Inch Long and 24 Gauge Thick, 20 Pieces, Sterling Silver

SKU: FHP-02507

Project uses 4 pieces



Swarovski Crystal, 77512 BeCharmed Rondelle 4.5mm Large Hole Beads 12mm, 2 Pcs, Golden Shadow

SKU: SWBB-5082


Project uses 2 pieces



Sterling Silver Rondelle Smart Bead Spacer Stoppers - Fits European Style Bracelets - 7x2.7mm (4)

SKU: BMB-2844

Project uses 4 pieces

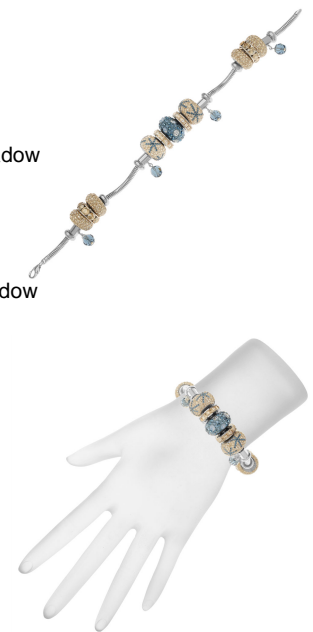

Recommended Tools:

[XTL-5511] Beadsmith Jeweller's Micro Pliers Chain Nose Flat Nose, [XTL-5514] Beadsmith Jewelry Fine Round Nose Micro Pliers, [XTL-5600] Xuron Sharp Flush Cutter Pliers - Wire/Soft Flex

Instructions

1. Your European Style bracelet has two smart bead stoppers already attached: one near the lobster clasp and one near the loop on the other end. Slide the smart bead stopper near the loop off of the bracelet. Set it aside for now.
2. Take 1 sterling silver head pin and string 1 Swarovski crystal denim blue round bead. Make a simple wire loop and cut off the excess wire with flush cutters.
3. Take your crystal bead component from the previous step and open the wire loop the same way you would open a jump ring. Slide on the loop of 1 sterling silver bail bead. Close the wire loop.
4. Repeat steps 2-3 three more times, so you have three silver bail beads with dangling crystal beads attached.
5. Now you will begin stringing your beads. Slide on 1 silver bail with attached crystal dangle and slide it down to the bead stopper positioned 1/2 inch from the clasp. Then string 1 Crystal Golden Shadow pave slim bead, 1 Crystal Golden Shadow rondelle bead, and 1 Crystal Golden Shadow pave slim bead. Then add 1 sterling silver smart bead stopper. See the photo for reference.
6. Slide on another sterling silver smart bead stopper, about 1 inch away from the last bead stopper strung. Then string 1 silver bail with attached crystal dangle, 1 BeCharmed pave snowflake bead, 1 Crystal Golden Shadow pave stopper bead, 1 BeCharmed pave blue medley bead, 1 Crystal Golden Shadow pave stopper bead, 1 BeCharmed pave snowflake bead, and 1 silver bail with attached crystal dangle. Then add 1 sterling silver smart bead stopper.
7. Slide on another sterling silver smart bead stopper, about 1 inch away from the last bead stopper strung. Then string 1 Crystal Golden Shadow pave slim bead, 1 Crystal Golden Shadow rondelle bead, 1 Crystal Golden Shadow pave slim bead, and 1 silver bail with attached crystal dangle. Then slide the smart bead stopper you removed in step 1 back onto the bracelet.
8. Your bracelet is finished!