

## Edwina Necklace

**Project N527**  
Designer: Kathy Mannix

Edwardian elegance is brought out in this 20th century era style utilizing silver plated filigree, Swarovski pearls and crystals.



### What You'll Need

Silver Plated Nouveau Crest Filigree Stamping 37x39mm (1)



SKU: PND-5708  
Project uses 1 piece

Antiqued Silver Plated Filigree Ring Circle Pendant Link 18mm (2)




SKU: FCO-5010  
Project uses 1 piece

SWAROVSKI ELEMENTS Crystal Faux Round Pearls #5810 8mm White (25)



SKU: SWP-8001  
Project uses 21 pieces

SWAROVSKI ELEMENTS Crystal Round Faux Pearls #5810 5mm White (50)

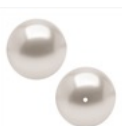

SKU: SWP-5001  
Project uses 17 pieces

SWAROVSKI ELEMENTS Crystal Round Faux Pearls #5810 3mm White (50)



SKU: SWP-3001  
Project uses 17 pieces

SWAROVSKI ELEMENTS Crystal #5000 2mm Round Beads Light Sapphire (20)



SKU: SWC-0031  
Project uses 34 pieces

SWAROVSKI ELEMENTS Crystal Rivoli Beads #1122 12mm Lt Sapphire SF (4)



SKU: SWC-9320  
Project uses 1 piece

SWAROVSKI ELEMENTS Crystal Briolette Beads #6010 17x8.5mm Lt Sapphire (1)



SKU: SWC-4709  
Project uses 1 piece

Nunn Design Silver Plated Chain 3.6X4 Flat Cable By The Foot



SKU: CHA-9808  
Project uses 1 foot

Beautiful Silver Plated Curved Lobster Clasps 10mm (10)



SKU: FCL-2513  
Project uses 1 piece

Sterling Silver Crimp Beads 2 x 2mm (20)



SKU: FCR-01122  
Project uses 4 pieces

Sterling Silver Wire & Thread Protectors Guards .031 Inch (10)



SKU: FCR-4149  
Project uses 4 pieces

E6000 Industrial Strength Glue Adhesive (0.18 fl oz)



SKU: XTL-1054  
Project uses 1 piece

Silver Plated Copper German Bead Wire Craft Wire 24 Gauge/.5mm (12 Meters / 39.3 Feet)



SKU: WCR-4416  
Project uses 3 inches

Beadalon Silver Plated Ball Head Pins - 22 Gauge - 2 Inches (24)



SKU: FHP-5319  
Project uses 1 piece

Soft Flex Best Beading Wire .014 Inch - 30 Ft.



SKU: XCR-5143  
Project uses 2 feet

### Instructions:

1. Start the beginning of a wire wrapped loop with the 3 inch piece of 24 gauge wire (WCR-4416). Link the Swarovski briolette (SWC-4709) onto the loop. Close the loop.
2. Thread an 8mm pearl (SWP-8001) onto the wire. Link the wire onto bottom/center of the silver plated filigree (PND-5708). Close loop and cut off excess wire.
3. Place a small dab of glue around the perimeter back side of the Swarovski rivoli (SWC-9320). Set the rivoli onto the filigree circle (FCO-5010) making sure to center it. Set aside for about 20 minutes. This cement does NOT dry instantly -- you have at least 5 minutes to make adjustments before the glue starts to set. For maximum strength bond, allow 24-72 hours for complete curing.
4. Now place some glue onto the back of the filigree circle that holds the rivoli. Set the circle onto the upper center of the large filigree piece (see photo) for placement.
5. Cut a piece of Softflex wire 12 inches in length. Secure one end with a bead stopper. Thread the beads on in the following order:
  - o two 8mm Swarovski pearls
  - o one 2mm Swarovski crystal (SWC-0031)
  - o one 3mm Swarovski pearl (SWP-3001)
  - o another 2mm Swarovski crystal
  - o two 5mm Swarovski pearls (SWP-5001)
  - o one 2mm Swarovski crystal
  - o another 5mm Swarovski pearl
  - o and another 2mm Swarovski crystal.

Repeat this pattern 3 more times. Thread on two more 8mm Swarovski pearls. Repeat for the other side.

6. Onto the end of the strand thread a crimp bead (FCR-1122), but do not crimp it yet. Thread the wire through and around the wire guard (FCR-4149). Thread the strand through the top hole on either side of the filigree piece. Make sure the filigree is sitting evenly in the wire guard (see photo). Now thread the wire back through the crimp bead and several of the consecutive beads. Pull the beading wire snug, and crimp the crimp bead. Trim excess beading wire from this end.
7. Remove the Bead Stopper from the other end of the strand. Repeat the previous step. This time through either the lobster clasp or the chain.
8. I added a small dangle onto the end of the chain. Thread a 5mm pearl, a 2mm crystal, a 3mm pearl and another 2mm crystal onto a head pin (FHP-3217). Wire wrap onto the end link of the chain. Cut off excess wire. You're finished!

Please refer to photo for more detailed information about this project.