

Olive Grove Necklace


Project N650
Designer: Julie Bean

Combining two popular elements, stunning Swarovski Crystal and ornate filigree, this necklace will be a beautiful addition to your collection. The copper looks so warm and inviting against the olivine green of the briolettes and bicones.



What You'll Need

Antiqued Copper Plated Round Ornate Filigree Spacer Beads 8mm (2)

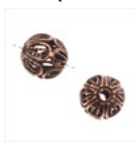


SKU: BMB-8649
Project uses 2 pieces

Antiqued Copper Plated Round Ornate Filigree Spacers Beads 6mm (2)



SKU: BMB-8655
Project uses 1 piece

Nunn Design Antiqued Copper Plated Oval Cable Chain 3mm By The Ft

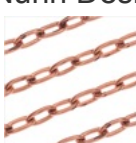


SKU: CHA-9815
Project uses 2 feet

Bali Copper Small S-Hook Twist Clasps 18mm x 7mm (4)



SKU: FCL-5015
Project uses 1 piece

Genuine Antiqued Copper Open Jump Rings 4mm 19 Gauge (50)

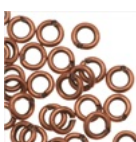

SKU: FJR-3102
Project uses 5 pieces

SWAROVSKI ELEMENTS Crystal Bicones 5328 4mm Olivine Beads (50)




SKU: SWBB-1446
Project uses 6 pieces

SWAROVSKI ELEMENTS Flat Crystal Briolette Beads #6012 11x10mm Olivine (2)



SKU: SWC-4346
Project uses 2 pieces

SWAROVSKI ELEMENTS Flat Crystal Briolette Beads #6012 15x14mm Olivine (1)

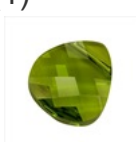

SKU: SWC-4446
Project uses 1 piece

Artistic Wire Non Tarnish Natural Copper Craft Wire 24 Gauge - 10 Yards



SKU: WCR-2435
Project uses 9 inches


Specialized Tools

Beadsmith Jewelry Fine Round Nose Micro Pliers



SKU: XTL-5514

Beadsmith Jeweller's Micro Pliers Chain Nose Flat Nose

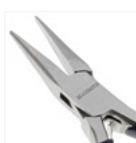

SKU: XTL-5511

Xuron Sharp Flush Cutter Pliers - Wire/Soft Flex



SKU: XTL-5600

Instructions:

Note: The finished necklace is approximately 16" long. If you prefer a longer necklace, simply cut longer chain lengths in step 2.

1. Start by watching the video on how to wire wrap a briolette. Following what you learned in the video, cut 3 lengths of copper colored artistic wire, 6 inches long each, and wire wrap each of your three Swarovski briolettes. Cut off excess wire with flush cutters. Set these aside for now.
2. Cut your antique copper plated oval cable chain into the following lengths: 2 segments 7 inches long each and 1 segment which is 9 links long.
3. Cut 3 inches of artistic wire in copper. Create a wrapped wire loop on one end. Thread onto the wire 1 Swarovski crystal 4mm bicone in olivine, 1 8mm antique copper plated ornate filigree round spacer bead, and another Swarovski crystal 4mm bicone in olivine. Create a wrapped wire loop after the last bicone. Cut off excess wire with flush cutters. Make a second one of these segments using another 3 inch cut piece of wire.
4. Cut another 3 inches of artistic wire in copper. Create a wrapped wire loop on one end. Thread onto the wire 1 Swarovski crystal 4mm bicone in olivine, 1 6mm antique copper plated ornate filigree round spacer bead, and another Swarovski crystal 4mm bicone in olivine. Create a wrapped wire loop after the last bicone. Cut off excess wire with flush cutters.
5. We have all our components ready now for our necklace, all we need to do is assemble them with 4mm copper jump rings. To see how to properly open and close jump rings, view the video here.
6. Open a jump ring and link it the end chain link on one of your 7 inch chain lengths. Also link onto that same jump ring the wrapped wire loop from one of the beaded segments you made using bicones and 8mm filigree spacer beads. Close the jump ring. Repeat this step on your other 7 inch chain length.
7. Open another jump ring and attach it to the wrapped wire loop on the other side of the beaded segment you just attached. Also link onto this jump ring 1 of your wire wrapped small briolettes, the chain segment which is 9 links long (via an end link), and the beaded segment with the 6mm ornate filigree spacer bead. Close the jump ring back up.
8. Go to the other side of the 6mm ornate filigree spacer bead you just attached, open and link a jump ring to it. Also link onto that jump ring: the end link of the 9 link long chain segment, the other smaller briolette, and the wrapped wire loop of the remaining 8mm ornate filigree spacer bead segment attached to the 7 inch chain. Close the jump ring.
9. Open another jump ring and link it to the large Swarovski crystal briolette in olivine (which you already wire wrapped) and the 5th link of the 9 link long chain segment. Close the jump ring.
10. Finally, attach the end links of your two 7 inch long chain segments to each side of the bali copper small s-hook clasp using jump rings.

Variations

Choose a different color of Swarovski crystal to change the look of this necklace. Maybe even mix colors so they are not all the same.

When substituting in items, pay attention to sizes and styles to make sure all your pieces will fit together.

